


Tying Tubular Nylon



Before tying the knot, use a lighter or match to heat the end of the strap, melting any frays so it does not fray further.

Thread one end of the shock cord through the “D” ring (or nosecone eyelet or eye bolt or Kwik-Link) and tie it using the knot illustrated below.

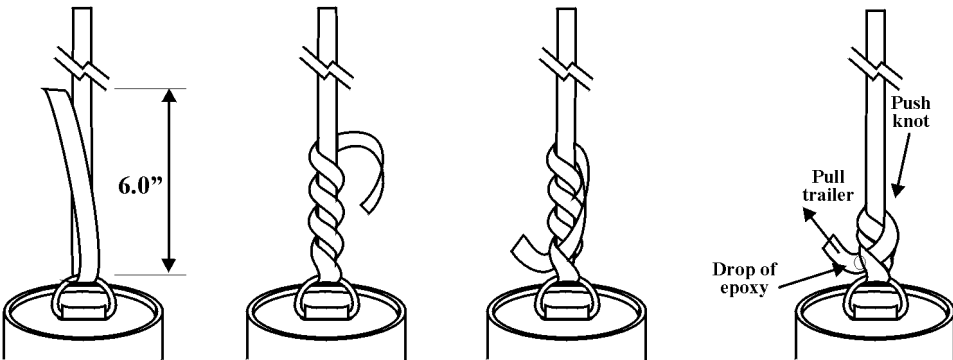

To cinch the knot, alternately pull on the trailer and push the knot towards the attach point. Repeat until tight. To make sure the knot never slips, place a drop of epoxy on the trailer where it meets the knot. **DO NOT** saturate the knot with epoxy or CA!

NOTE: PML has previously recommended using the Bowline Knot with our Tubular Nylon. The bowline is still acceptable; however, we find this knot easier to use and it produces a "cleaner" looking knot.